


VIBRATION CONTROLLER WON'T WORK

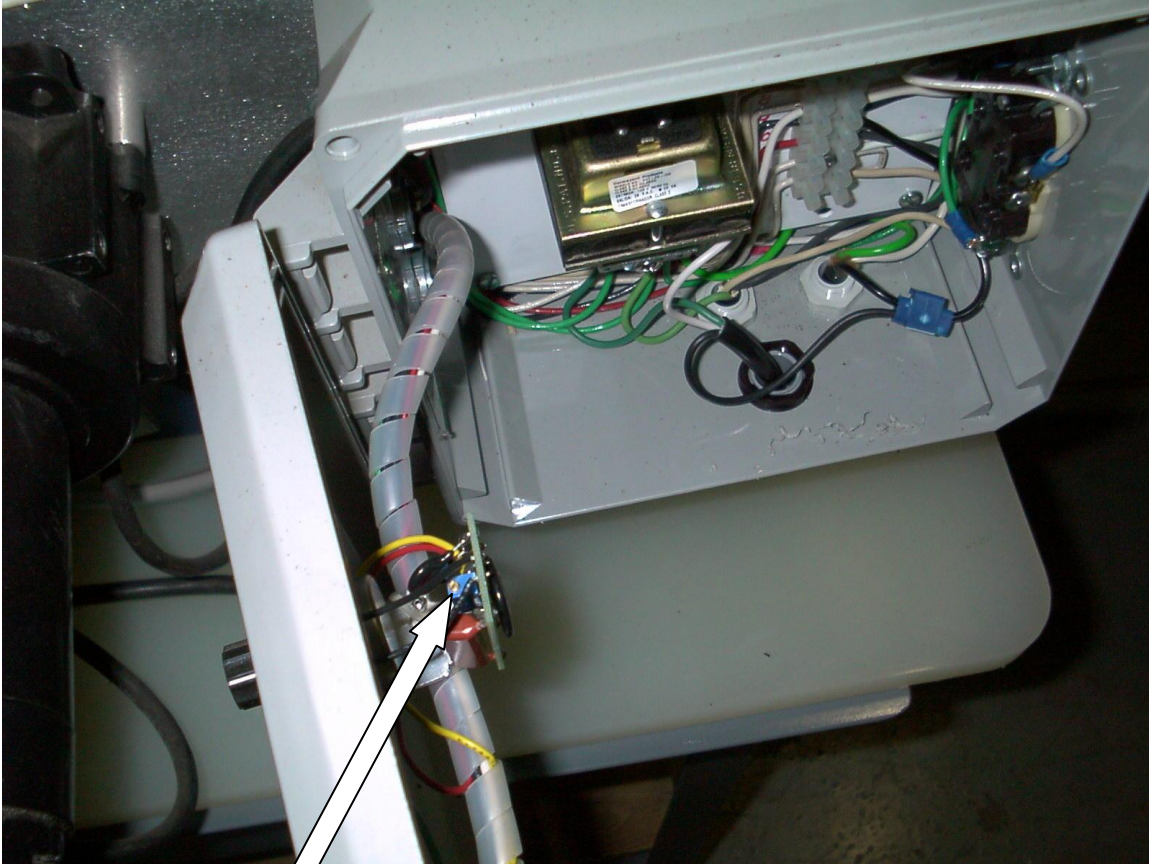

Turn small screw on end of blue rectifier to see if that corrects vibration problem

If the vibrator for the seeder or the TopCoater won't work, sometimes the problem is the rectifier on the printed circuit board. Open the control box and being careful not to touch any electrical item, with a very small screwdriver turn the small screw on the end of the blue rectifier on the circuit board back and forth a few times. That might "break it loose" and it will start vibrating again.

If that doesn't fix the problem it will be necessary to order a new SCR vibrator controller from Blackmore, call (800) 874-8660 or email info@blackmoreco.com