


# BLACKMORE COMPANY, INC

10800 BLACKMORE AVENUE  
BELLEVILLE, MI 48111  
1 (800) 874-8660 / (734) 483-8661  
FAX: (734) 483-5454  
www.blackmoreco.com

## SEED WIPE OFF ASSEMBLY INSTRUCTIONS

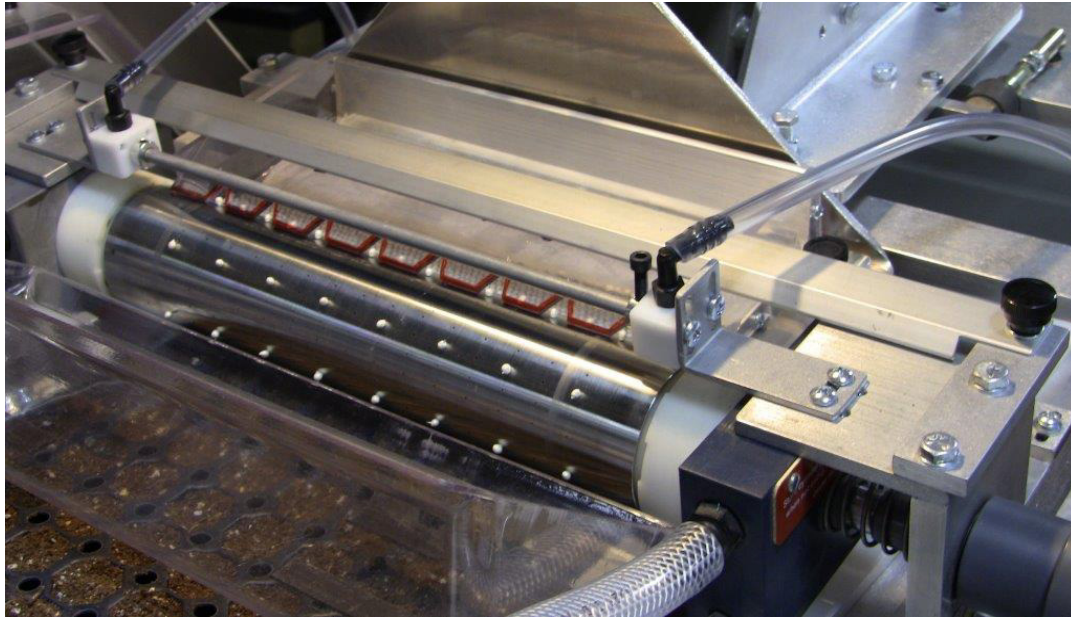

1. Important! Remove the chain!
2. Raise the cylinder head until the tray being sown clears the cylinder by 1/4" to 3/8".
3. Determine how many rows need to be wiped off and place that many brushes in the extrusion slot.
4. Remove the four bolts holding the cylinder head down and install the seed wipe off assembly per above picture. (This example shows using a 288 cylinder to place 2 seeds per cell into 6-06 flats, wiping off 4 rows of seed) Use the longer bolts supplied.
5. Turn on the vacuum pump and vibrator. Hand load the cylinder.
6. Adjust the brushes and rails to wipe off the undesired seeds.
7. Install the chain. Added links may be needed to lengthen the chain due to the required height of the cylinder.
8. Adjust row spacing to desired length by inserting row dimension in PLC seeder display or installing proper sprockets if using a clutch/brake machine.

3/23/2015